



Quick Start Guide

Power unit with standard POE switch, injector or Reader III

Confirm unit is powered, LED on unit should blink

Press and hold Laser button to confirm laser is operational

Optional reader Mode

Plug laser into reader using Cat 5-6 wire

Use Laser button to turn laser on / off

Reader will display unit orientation, angle and laser on / off

Network mode

All units are shipped with the IP address: 192.168.1.100

Set your network adapter in the following range:

IP Address: 192.168.1.xxx

Subnet Mask: 255.255.255.0

Type in the unit IP address into your browser: 192.168.1.100

Your browser will now display the Alignarray Main Page

The page will display unit orientation, laser on / off and angle

Control the laser, blink rate and laser timeout using buttons

Please refer to the user guide for Management functions